


AVP / PBA Wall Panel - Preassembled Walk Door and Glass-Front Walk Door - Head Trim Installation

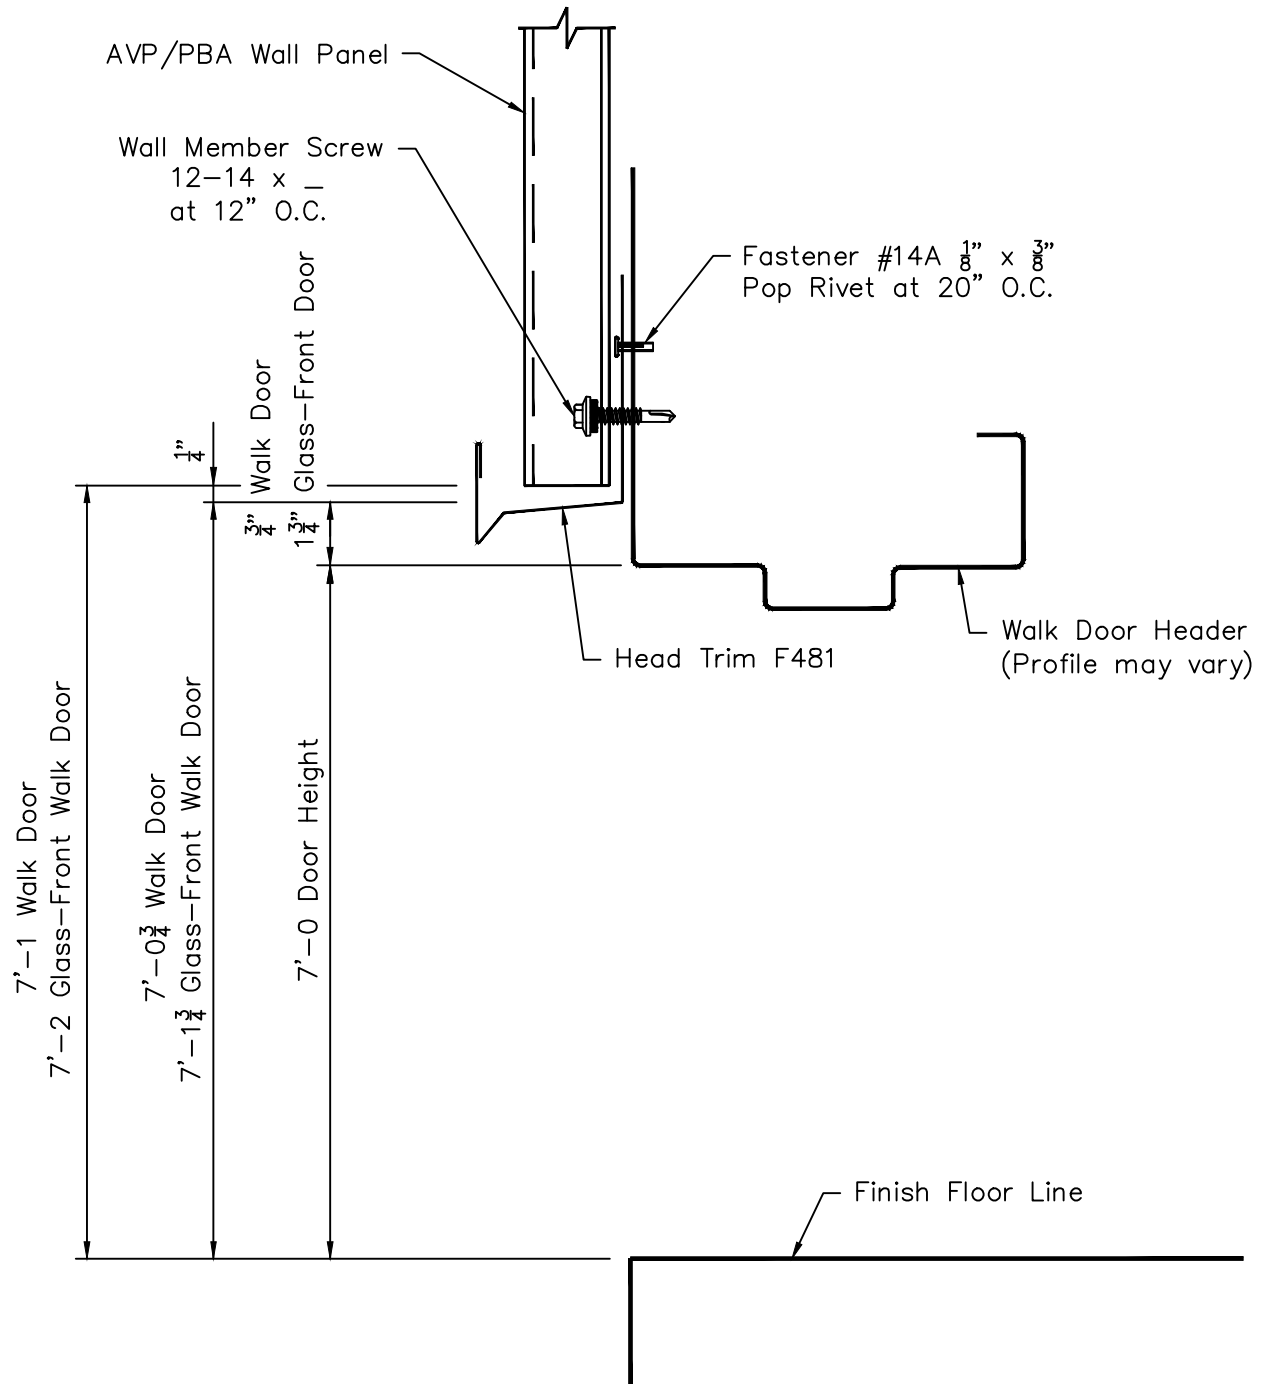

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.