
Jamb/Sub Jamb attachment at High Eave location between Eave Strut and Purlin

AC00919

Date 114 1 000

Notes;

- 1.) See EF09108 for Endwall Column attachment when located at same Purlin space (or adjacent Purlin space) as Jamb/Sub Purlin.
- 2.) Bridge Channel may span multiple Purlin spaces when required.
- 3.) Wind Edge Strip Purlins, when required, do not attach to Bridge Channel.
- 4.) Purlin and Eave Strut extends past Bridge Channel flange when "Optional" Overhang or Facade is required at endwall.

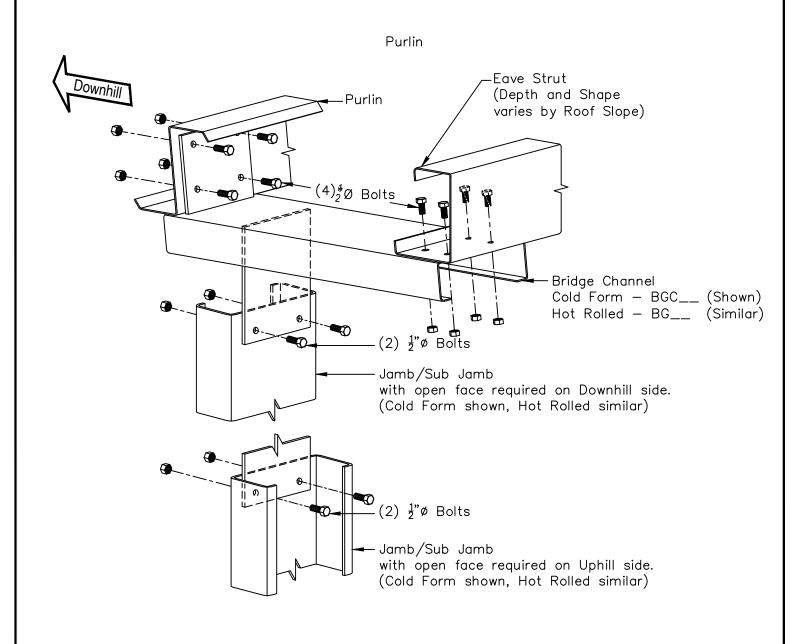

Note:

Bolt Jamb/Support Columns to Downhill side of connection plate.