

# AVP / PBA Wall Panel - Walk Door & Glass- Front Walk Door


## Field Notch Panel at Head Trim

Page  
**PA09023**

Date  
**Mar '13**

Rev.  
**01**

**Note:** Trim Installation can be done by Field Notch Panel as shown on PA09022 & PA09023  
OR with Field Notch and Bend Tabs at Head Trim as shown on PA09024 & PA09025.

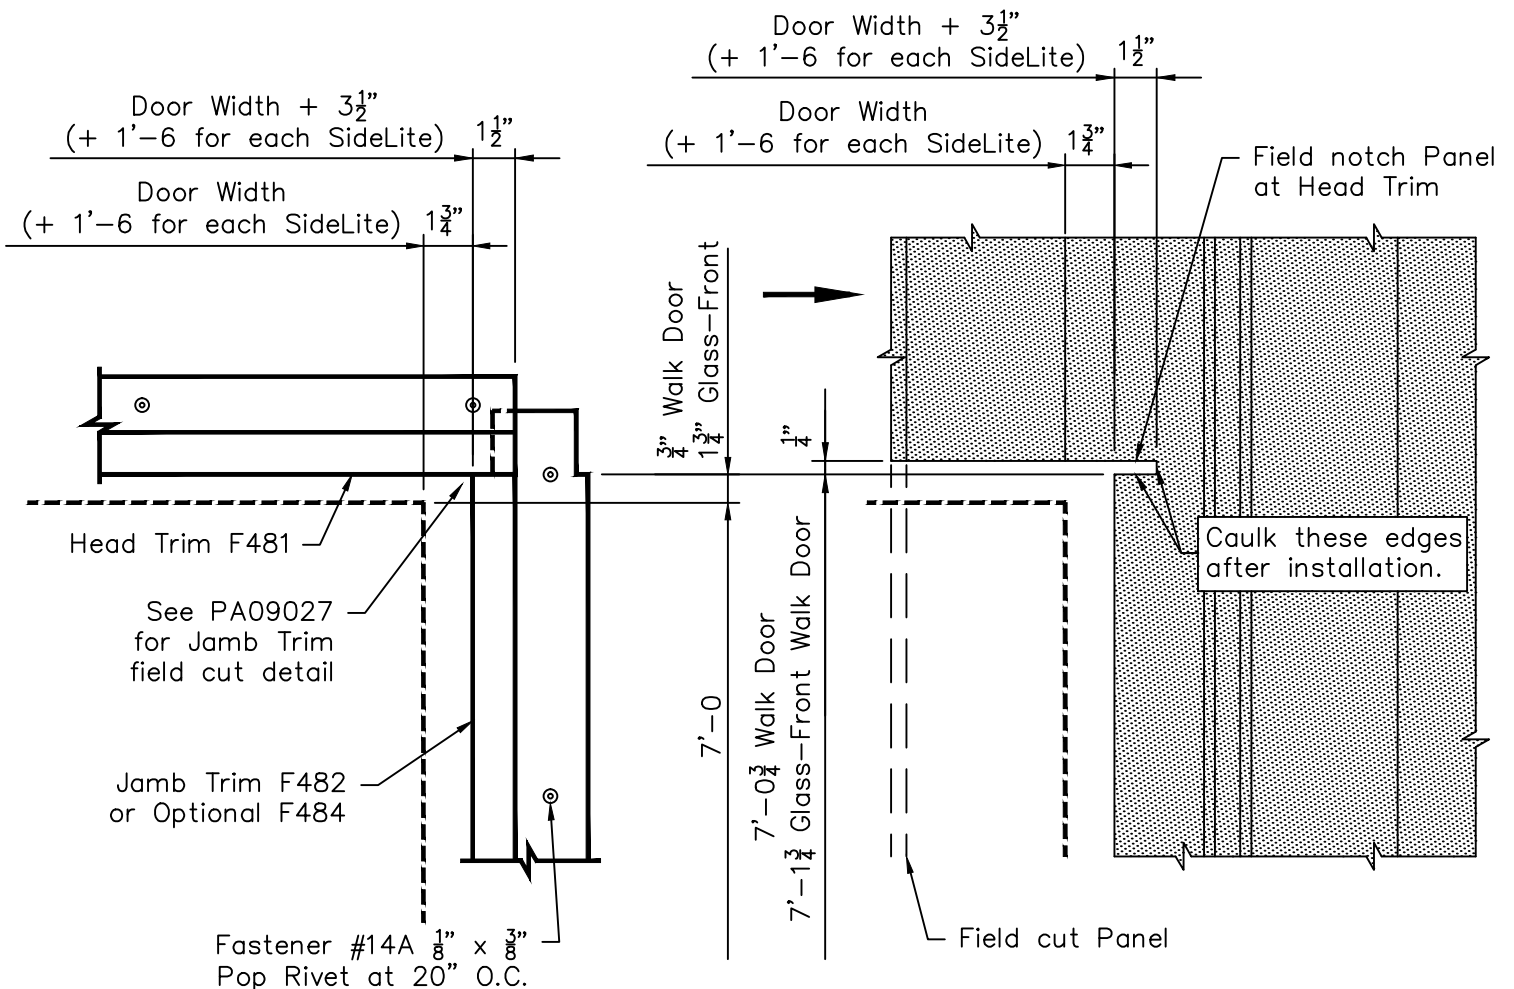

**Note:** All trim is to be installed BEFORE blanket insulation is applied to walls

**Note:** Panel position is shown with Panel Rib starting 6" from Steel Line and Door on 1'-0" module. Location of Panel Rib may vary depending on the Door Width and location. Field measure before cutting Panel and Trim.